



Rufflette Roman Wooden Blinds Installation Guide

Installation Kit

Bracket Screws x 8

Wingnuts x 2

Mounting Brackets x 2

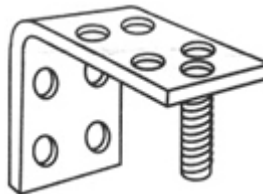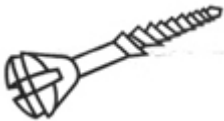

Note: Use no. 6 rawl plugs (not included) if mounting onto dry wall or plaster.

It is recommended prior to installing that a wooden batten is fitted securely into position.

Required Tools


Pencil

Drill

Screwdriver



Fitting Instructions

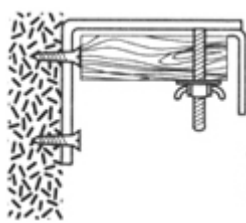

Inside Mount


Outside Mount

1. To determine position of brackets, place into header rail of blind and mark screw hole position with pencil at window.

2. Detach brackets from blind. Pre-drill holes. Fix brackets into position using screws provided (4 per bracket).
3. To fix blind into position - slide bolt through the slot in the header rail and use wing nuts to secure blind into place.

Use a Rufflette Cleat Hook to keep pull cord neatly secure.

Brackets can be fitted to the end of the blind header rail or the back.

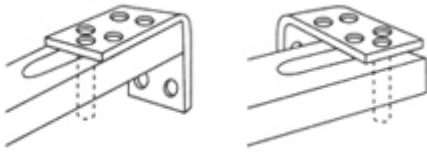

End Fixing

Back Fixing

Operating Instructions

To lower blind, pull cord to the left to release the cord locking mechanism. Allow the blind to drop to the desired height. Pull the cord to the right to lock the mechanism in place.

To raise the blind, pull cord to the left to release the cord lock. Raise to desired height and pull cord to right to lock into place.

